

DuroZone JTZ-HP Part #35235 typical wiring diagram for a single stage heat pump unit for a two or three zone system.

Note on air handler:


Some air handlers have a Y terminal for fan speed; this Y and the Y terminal on the heat pump should both be wired to the Y terminal on the panel equipment strip.

Note on thermostats: wire terminal G on the zone 1 thermostat only, this will prevent any feedback problem.

Notes on heat pump:

1. The Y2 terminal is optional, for second stage equipment.

2. Some heat pumps have a changeover valve activated in the heat mode; if this is the case, wire the B terminal on the panel equipment strip to the B terminal on the heat pump equipment strip.

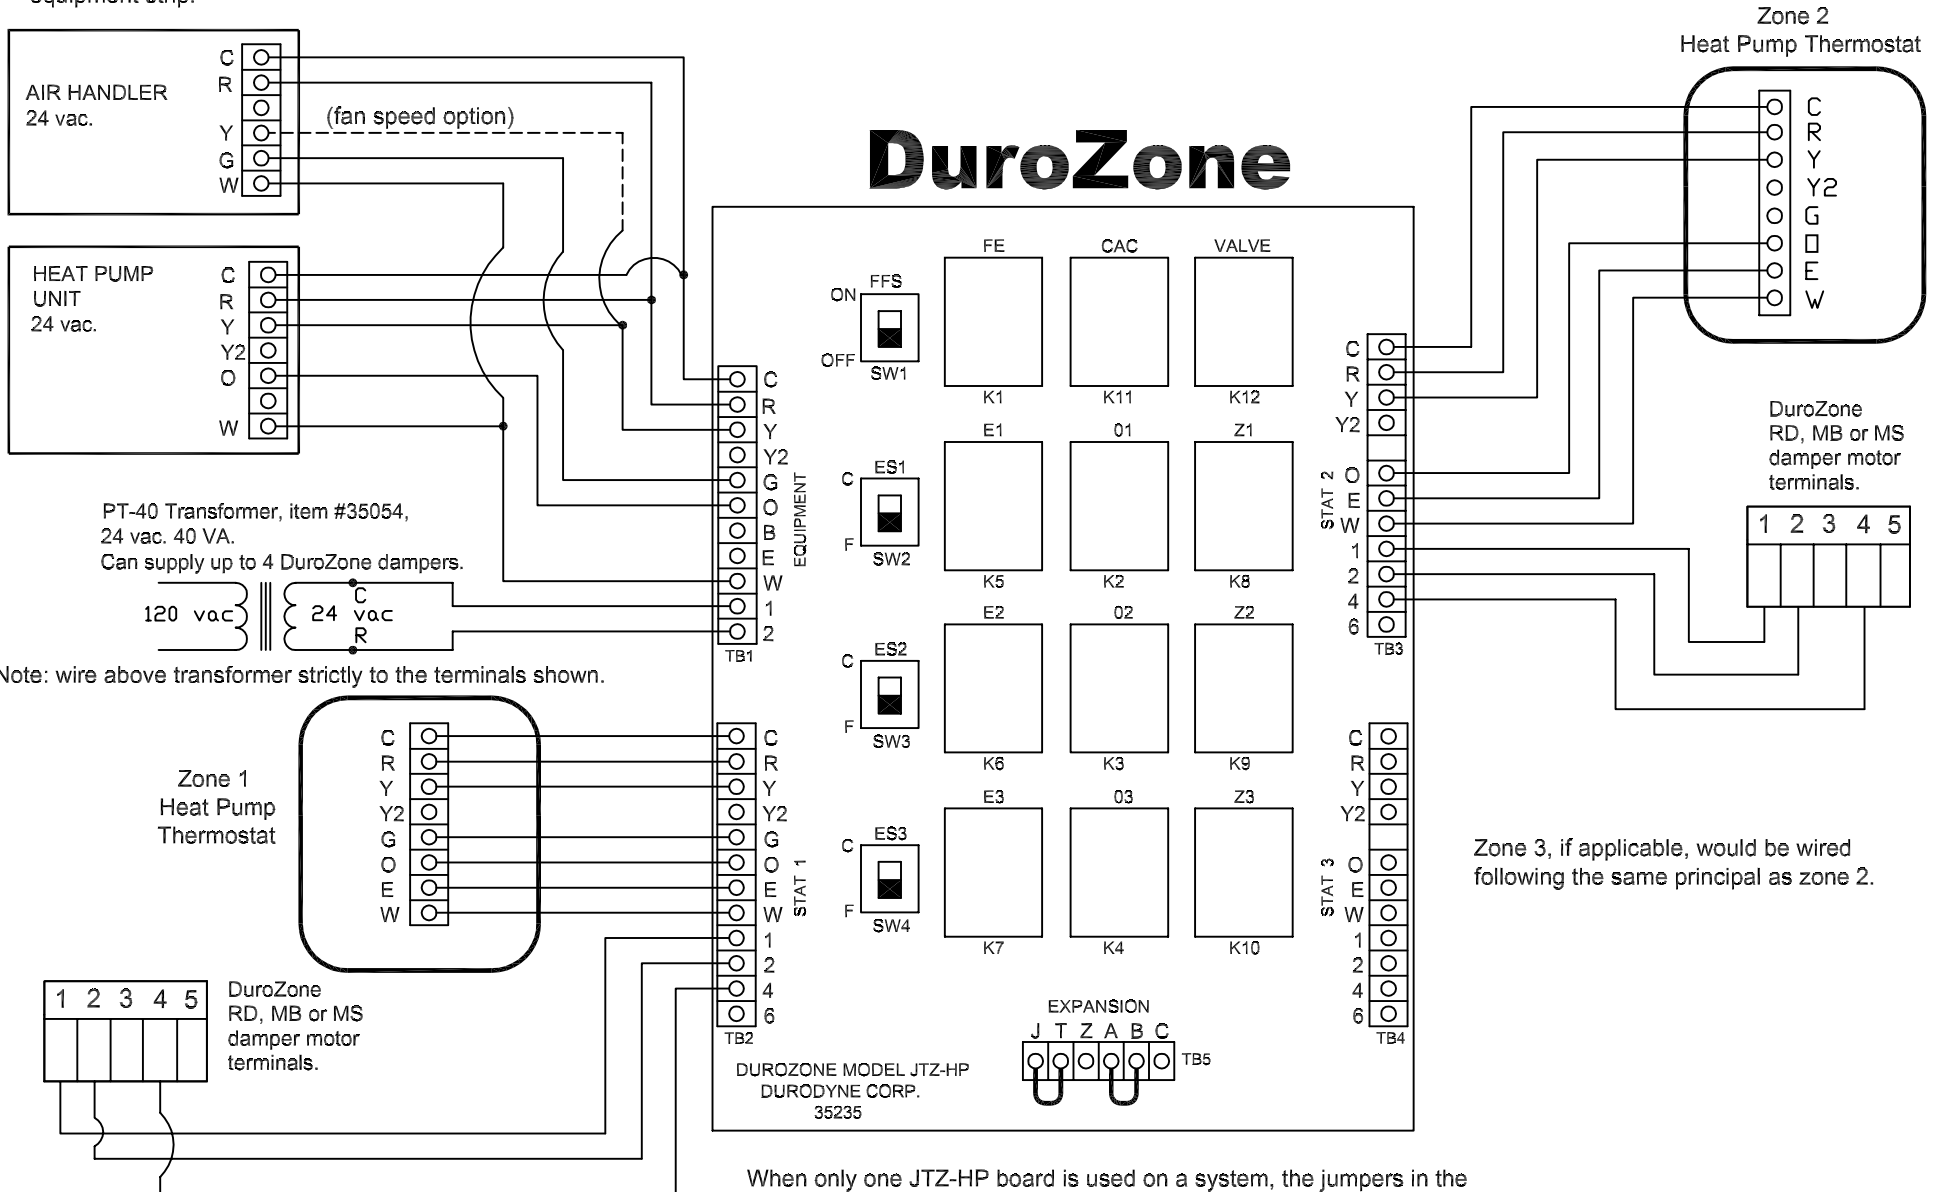

When only one JTZ-HP board is used on a system, the jumpers in the expansion section between J and T as well as A and B must be in place.